


## MT02A synchronous driver with PC' installation instruction

1 Decompress the package to any path on PC.


2 Connect the MT02A to the PC use USB cable. System will notice that a new hardware was found, just like the picture below:

a)

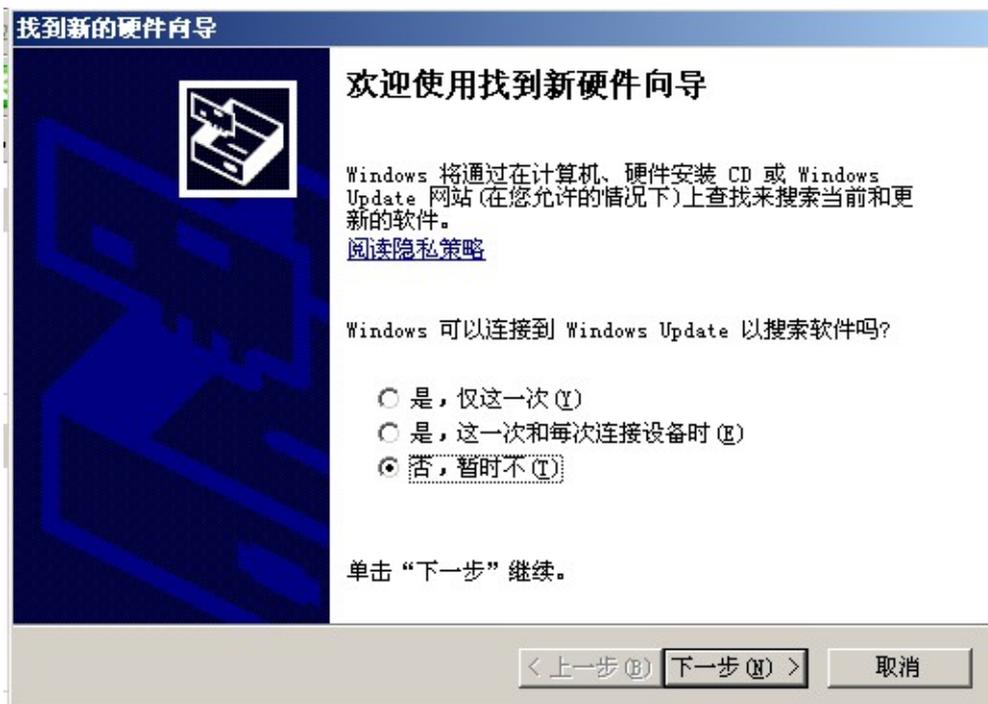

Choose "No, not this time", then press "Next".

b)

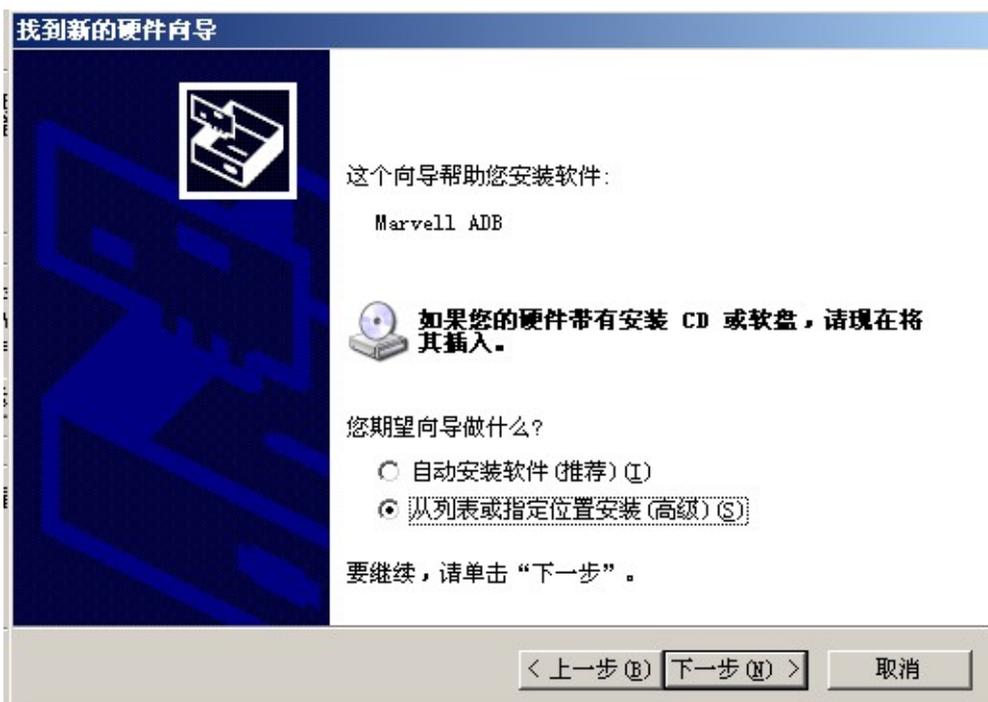

Choose "Install from a list or specific location(Advanced)", then press "Next"

c)



Choose "Include this location in the search:", press "Browse", then choose the directory "ADB" which was the subdirectory of "USB", press "Ok", then press "Next".

d)



Driver install finished, press "Finish".

Now, the driver for PC is all complete.