


NetTop English

Front View



Pic 1

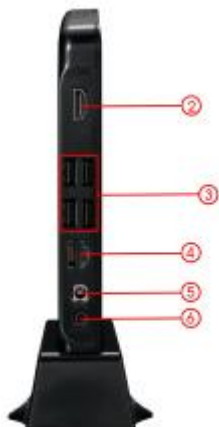

Pic 2



Pic 3

Details Introduction

#	Feature Item	Functional Description
1	Power Button and Power Indicator	Power On button and the indicator light is on
2	HDMI OutPut	HDMI HD Port, connecting to LCD TV or LCD Device
3	USB2.0 Ports	The Ports where you can connect to USB disk or other usb device
4	LAN Port	Can connecting to Ethernet
5	DC InPut	Electric Power Source
6	Audio OutPut	Connection to sound box or HeadSet
7	Pre-USB2.0 Ports	The Ports where you can connect to USB disk or other usb device
8	HeadSet OutPut	Connection to sound box or HeadSet
9	MicroPhone InPut	Connect MicroPhone device
10	Base Stand Screw	Fixed bracket

Installing the base stand

1. Attach the base stand to the unit.
2. Tighten the screw.

Federal Communications Commission Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful inference, and

NetTop

- This device must accept any interference received including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate this equipment.

CE Mark Warning

This is a Class B product, in a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Product disposal notice

IMPORTANT: This symbol of the crossed out wheeled bin indicates that the product (electrical, electronic equipment, and mercury-containing button cell battery) should not be placed in municipal waste. Check local regulations for disposal of electronic products.

Macrovision Corporation Product Notice

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.



图 (1)

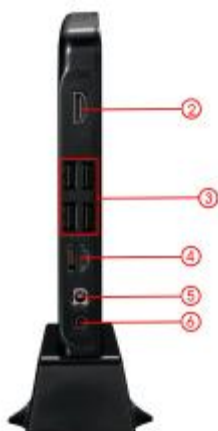


图 (2)



图（3）

详细说明

#	功能项目	功能说明
1	电源开关和电源指示灯	开机键和电源指示灯
2	HDMI 高清输出接口	可连接带 HDMI 输出接口的液晶显示设备或液晶电视
3	USB2.0 接口	可连接 USB 鼠标，键盘，USB Disk 等 USB 设备
4	LAN 端口	有线网卡接口，连接有线网络
5	DC 输入	电源接口，提供主机供电
6	音频输出	连接音箱或其他外置音响设备
7	前置 USB2.0 端口	可连接 USB 鼠标，键盘，USB Disk 等 USB 设备
8	耳机输出	连接耳机或其他外置音响设备
9	麦克风	连接麦克风设备
10	基座	固定主机到基座上

支架安装说明：

1. 将主机底座直往基座上。
2. 以手指旋紧螺丝来固定主机。

使用事项说明

本产品的设计与测试结果均符合电子设备所要求的安全标准，为确保您使用上的安全，请务必详细阅读以下注意事项说明。

安装过程安全须知

- 在您使用本产品之前，请务必详加阅读本手册提供的相关说明进行安装。
- 请勿在潮湿或过热的环境下使用本产品。
- 请将本产品放置平稳或使用基座固定。
- 本产品机壳各个开口通风处供散热使用，请勿阻挡或盖住任一通风口，并确保机身周围有足够空间供通风使用，并请勿插入任何物体至一通风口内。
- 本产品使用环境在 $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$ 。
- 如果您使用延长线来连接本产品，请确保延长线上连接装置的总电流不超过可用负载之极限，否则可能会出现部分设备无法被识别到。

使用过程安全须知

- 请勿踩踏或让任何物体来挤压电源键。
- 请勿将任何液体泼洒至本机上。
- 当本产品电源关闭时，仍会有部分电流存在，在清洁本机时，请务必先拨除电源，以免触电。
- 如果您遇到下列关于本产品的技术问题，请先拨除电源接头再与产商的技术服务人员或经销商联络。
- 电源线或接口损坏。
- 液体渐入本产品内。
- 依照指示说明操作后，仍无法正常开机。
- 本产品因掉落而受损或外壳受到损坏。
- 本产品的功能有不正常的改变时。

禁止拆机

警告：本产品一经自行拆机将不能享受保修服务。

电源适配器的使用

提供随机配套的AC电源适配器能适应100~240 V ~50 或 60HZ, 让您可以在提供此频率范围的国家或区域使用本产品。

NetTop

繁体中文

NetTop 俯视图



图（1）



图（2）



图 (3)

詳細說明

#	功能項目	功能說明
1	電源開關和電源指示燈	開機鍵和電源指示燈
2	HDMI 高清輸出介面	可連接帶 HDMI 輸出介面的液晶顯示設備或液晶電視
3	USB2.0 介面	可連接 USB 滑鼠，鍵盤，USB Disk 等 USB 設備
4	LAN 埠	有線網卡介面，連接有線網路
5	DC 輸入	電源介面，提供主機供電
6	音頻輸出	連接音箱或其他外置音響設備
7	前置 USB2.0 埠	可連接 USB 滑鼠，鍵盤，USB Disk 等 USB 設備.
8	耳機輸出	連接耳機或其他外置音響設備
9	麥克風	連接麥克風設備
10	基座	固定主機到基座上

安裝基座

1. 將基座旋置於主體上。
2. 以手指旋緊螺絲。

使用注意事項 (Traditional Chinese)

本產品之設計與測試結果皆符合最新的資訊科技設備之安全標準。然而，為確保您使用上的安全，請務必詳閱以下注意事項。

安裝過程安全須知

- 在您使用本產品之前，請務必詳加閱讀與依照本手冊所提供的相關資訊進行安裝。
- 請勿在潮濕或過熱的環境下使用本產品。
- 請將本產品放置於平穩的地方使用。
- 本產品機殼之各個開口通風處供散熱使用，請勿阻擋或覆蓋任一通風口，並請確保於機身之周遭有足夠空間供通風使用。並請勿插入任何物體至任一通風口內。
- 本產品適用之室溫為介於 $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$ 。
- 如果您使用延長線連接本產品，請確保延長線上連接裝置的總安培數不超過其可負荷之極限。

使用過程安全須知

- 請勿踩踏或讓任何物體擠壓到電源線。
- 請勿潑灑水或任何液體至本產品。
- 當本產品電源關閉時，仍會有少量的電流存在。所以清潔本產品前，請先拔除所有電源、數據機與網路線之接頭。
- 如果您遇到下列關於本產品的技術問題，請先拔除電源接頭再與合格的技術服務人員或經銷商聯繫。
- 電源線或接頭損壞。
- 液體濺入產品本體內。
- 依照指示說明操作後，仍無法正常啟動本產品。
- 本產品因掉落而受損或外殼受到損壞。
- 本產品之效能有不正常的改變時。

禁止拆解

警告：本產品一經拆解即喪失保固服務之資格。

電力使用資訊

AC 電源變壓器可將交流電源轉換為直流電源，並調整電壓以供電腦使用。它能自動適應100~240 伏特與 50 或 60赫茲的頻率，讓您可以在提供此頻率的國家或區域使用本產品。